


Touch screen - Home

TOUCH SCREEN HOME MENU

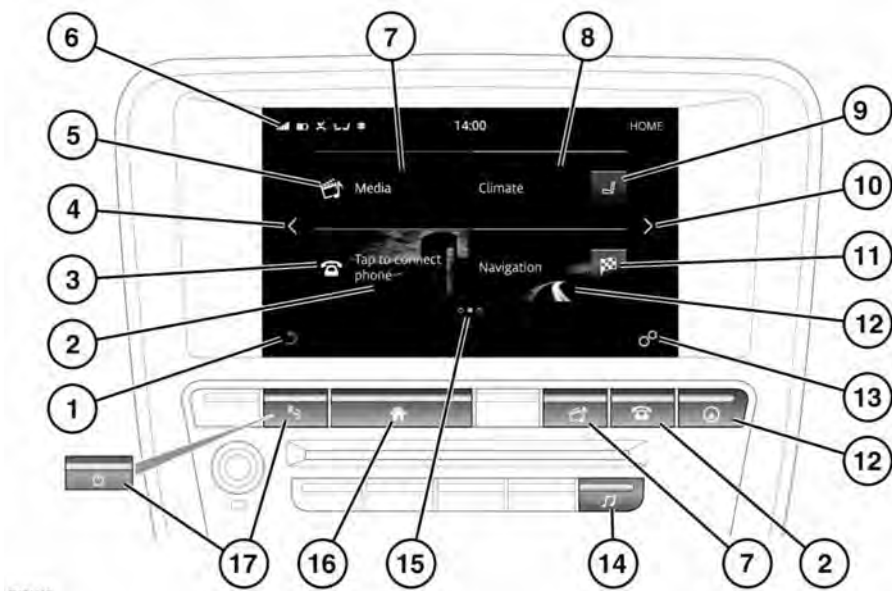

E174143



Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.



Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.



Avoid spilling or splashing liquids onto the Touch screen.

1. Touch to Return to a higher menu level.

Note: The return icon will be disabled on the **HOME** screen.

2. Touch the screen or press the button, to select the **PHONE** screen.

3. Touch to select **Voicemail** when a phone is connected, or the **PHONE** screen when no phone is connected.
4. Touch the arrow or swipe the screen to the right, to select the **MY HOME** screens.
5. Touch to select the media shortcut:
 - CD, **Bluetooth®** and USB: Alternate between play and pause.
 - Radio: Station mute.Alternatively, touch to switch the Media system off.
6. Status icons. See **107, TOUCH SCREEN STATUS ICONS**.
7. Touch the screen or press the button, to select the media screen. If the Media system is already switched on, then touch to select the current media source menu.

Note: When the system is active, current information for the media being played will be displayed.

8. Touch to select the **FRONT CLIMATE** screen. See **140, FRONT CLIMATE CONTROL**.
9. Touch to select the **SEAT COMFORT** screen. See **146, HEATED SEATS, 146, CLIMATE SEATS, 146, SEAT MASSAGE**.
10. Touch the arrow or swipe the screen to the left, to select the **EXTRA FEATURES** screens.
11. Touch to set a destination or to cancel guidance if a destination is already set.
12. Touch to select the **NAVIGATION** assistance map.
13. Touch to select **Home Settings**, via the **SETTINGS** pop-up menu.
14. Press to select **AUDIO SETTINGS** menu. See **115, AUDIO SETTINGS**
15. Indicator for the number of available screens. The solid dot indicates the position of the currently displayed screen.
16. Press to select the **HOME** screen, or double press to select **PREVIEWS** screen.
17. Press to switch Park Assist on/off or to switch the screen on/off (on vehicles without Park Assist fitted).
For vehicles with Park Assist, the screen can be switched off via the **SETTINGS** pop-up menu.

TOUCH SCREEN STATUS ICONS

The icons displayed at the top of the screen provide information about the status of the vehicle feature or application.



Phone signal strength indicator.



Phone battery level indicator.



Status of the Heated/Climate seats.



Wi-Fi signal.



Connecting.



Phone set to divert incoming calls.



Network connection status.

TOUCH SCREEN USE



Do not use excessive pressure when selecting items on the Touch screen.

Definitions for the various button taps and Touch screen gestures used in this handbook:

- Touch: Briefly touch the screen's surface with your fingertip.
- Touch and hold: Touch the screen's surface for an extended period of time.
- Swipe: Move your fingertip over the screen's surface in a fast linear movement.
- Drag: Touch an object and move it with your fingertip over the screen's surface, without losing contact.
- Pinch: Spread two fingers apart on a map or image to zoom in. Pinch to zoom out.

TOUCH SCREEN CARE



Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Retailer/ Authorized Repairer.

MY HOME SCREEN



E166777



Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

The **MY HOME** screen enables the user to display and arrange widgets and shortcuts to applications.

1. **MY HOME** screen: Multiple screens are available.
2. Widgets and shortcuts: These are available in different sizes and can be moved to different locations.
3. Personalized **MY HOME** screen name: Touch to edit.
4. Touch the arrows or swipe the screen to view other **MY HOME** screens, or return to the **HOME** screen.
5. Edit icon: Touch to display edit mode.

EDITING SHORTCUTS, WIDGETS AND SCREENS

Adding a widget: Touch the Edit icon or touch and hold the screen to display edit mode. Next, touch any of the + symbols on the screen and select from the available categories in the footer. Scroll through the gallery of widgets using the direction arrows or by using a swipe action. Touch to select a widget; this will then display on the **MY HOME** screen.

Moving a widget: Touch and hold the screen, then drag the widget to a new location. To move the widget to another **MY HOME** screen, drag it to the side of the screen.

Resizing a widget: When the widget has been selected, moved to a new location, or newly created, a resize toggle will be displayed. Touch the toggle to resize the widget.

Delete a widget: Touch and hold the screen, then drag the widget to the delete bar.

Edit a personalized screen name: Touch the screen name and enter text using the keyboard; touch **OK** to complete.

Moving a screen: Pinch the screen or double press the Home button to display **PREVIEWS** of the **HOME**, **MY HOME** and **EXTRA FEATURES** screens. Touch the preview to display the chosen screen. Touch the Edit icon or touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch and drag the screen preview to the required position.

Adding a screen: While in the **PREVIEWS** screen, touch the Edit icon or touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch the + symbol to create a new **MY HOME** screen. When adding or moving a widget, it can be dragged to the left side of the screen; this will then create a new **MY HOME** screen.

***Note:** A maximum of 4 **MY HOME** screens can be added.*

Deleting a screen: While in the **PREVIEWS** screen, touch the Edit icon or touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch and hold the chosen **MY HOME** screen and drag it to the delete bar and release.

EXTRA FEATURES



Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

Touch the Extra feature to launch the required application or setting screen:

- **Rear Media:** See **114, REAR MEDIA CONTROL FROM THE TOUCH SCREEN.**
- **Eco Data:** The Eco Data system is designed to help the driver maximize fuel economy by providing vehicle data and driving tips. Real time Eco Data can also be displayed in the Instrument panel.
- **Cameras:** See **159, SURROUND CAMERA SYSTEM**
- **InControl Apps:** See **190, INCONTROL APPS.**
- **Live:** See **189, INCONTROL PRO SERVICES.**
- **Seats:** See **145, SEAT COMFORT AND ADJUSTMENT.**
- **Valet Mode:** See **110, SELECTING VALET MODE.**
- **Contacts:** See **166, CONTACTS.**
- **Voice:** See **183, USING VOICE CONTROL.**
- **Bluetooth:** See **130, PAIRING AND CONNECTING USING THE MEDIA PLAYER.**
- **Settings:** See **112, GENERAL SETTINGS.**

***Note:** The number of Extra features will vary, depending on the specification of the vehicle.*

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the luggage compartment and glovebox. Valet mode also prevents operation of the Touch screen, to prevent access to phone numbers or navigation addresses. Only essential driver assist features are available, such as Cameras, Parking Aid, etc.

Valet mode can be activated by using the **Master PIN** (set in Settings) or by using a temporary PIN (if the Master PIN is unknown), to allow someone other than the owner to set Valet mode.

When set with the Master PIN, only the Master PIN can unlock Valet mode. When set with a temporary PIN, the temporary PIN or the Master PIN will unlock Valet mode.

To select Valet mode:

1. Touch **Valet Mode** in the **EXTRA FEATURES** screen.
2. Enter the **Master PIN** or a memorable 4 digit temporary PIN. If using a temporary PIN, you will be prompted to confirm the PIN. If you wish to cancel the PIN, touch the Return icon. If the confirmation PIN is incorrectly entered, you will be prompted to enter the PIN again. See **112, GENERAL SETTINGS.**
3. The **VALET MODE** screen is displayed to indicate that a PIN has been accepted and **Valet Mode** is active.

The luggage compartment and glovebox are now securely locked in Valet mode and the **Valet Mode On** screen is displayed.

DESELECTING VALET MODE

To deselect Valet mode:

1. When you re-enter the vehicle, touch the screen.

2. Enter your Master PIN or temporary PIN (if used to set) and touch **OK**.

Home screen is displayed to indicate that the PIN has been accepted and Valet mode has been deactivated.

- The luggage compartment and glovebox will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: *If the Master PIN is forgotten, Valet mode can only be deactivated by your Retailer/ Authorized Repairer.*

Touch screen - Settings

GENERAL SETTINGS

Touch the Settings icon from any screen, followed by **All Settings** and then **General**.

The **General** settings menu is divided into categories:

- **Time and Date**

Note: Setting a year too far in the future could stop certain online apps from working, as the certificate will appear to be invalid.

- **Display**

- **Screensaver**

- **Master PIN**

*Note: The default Master PIN is **1926**. This should be changed to your own PIN as soon as possible.*

- **Legal information**

- **Data Collection** (only when set).

Touch to display the list of settings for the required system.

SYSTEM SETTINGS

Touch the Settings icon from any screen, followed by **All Settings** and then **Features**.

The **Features** settings menu is divided into categories.

- **Home**

- **Navigation**

- **Media**

- **Phone**

- **Climate**

- **Rear Media**

- **Seats**

- **Connectivity**

- **Cameras**

- **InControl Apps**

- **Live**
- **Voice**
- **Bluetooth**.

Touch to display the list of settings for the required system.

Note: The list will vary, depending on the specification of the vehicle.