



ABOVE & BEYOND

# DISCOVERY SPORT


## QUICK START GUIDE

- 2 DRIVER CONTROLS
- 3 VEHICLE ACCESS
- 4 COMFORT ADJUSTMENTS
- 6 DRIVING
- 11 TOUCH SCREEN
- 12 MEDIA
- 14 NAVIGATION
- 15 PHONE
- 16 GAS STATION INFORMATION



SOME FEATURES MAY NOT BE FITTED TO YOUR VEHICLE.

# DRIVER CONTROLS

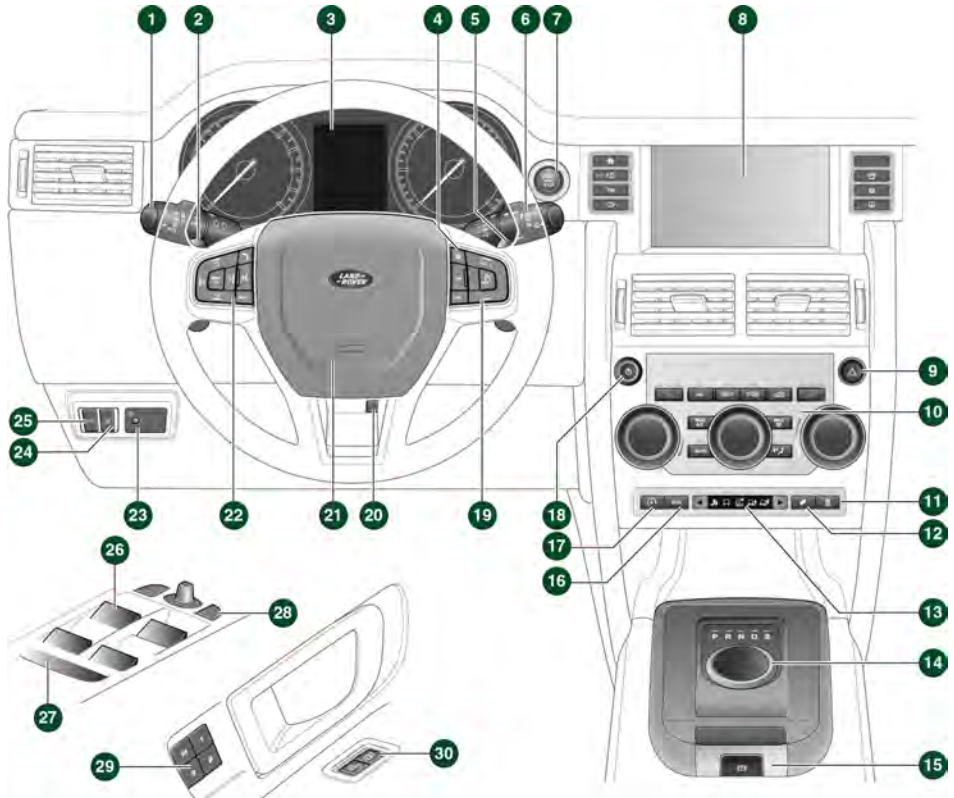

1. Headlamps, turn signals and Trip computer.
2. Manual gear shift paddle (-) down.
3. Instrument panel, warning lamps and Message center.
4. Heated steering wheel switch.
5. Manual gear shift paddle (+) up.
6. Wipers and washers.
7. Engine STOP/START.
8. Touch screen.
9. Hazard warning lamps.
10. Climate control.
11. Dynamic Stability Control (DSC).
12. Hill Descent Control (HDC).
13. Terrain response.
14. Gear selector.
15. Electric Parking Brake (EPB).
16. ECO program.
17. Intelligent stop/start.
18. Media on/off and volume control.
19. Cruise control or Adaptive Cruise Control (ACC) switches.
20. Steering column adjuster.
21. Horn.
22. Media system control.
23. Interior illumination control.
24. Lane Departure Warning (LDW) button.
25. Tailgate release.
26. Window controls.
27. Rear windows isolation.
28. Mirror adjuster/power-fold mirror.
29. Driving position memory.
30. Central locking switches.

# VEHICLE ACCESS

## SMART KEY



Press once to switch the headlamps on. Press again to switch off.



Press to unlock and release the tailgate. A powered tailgate will open to the set height.



Press and hold for 3 seconds to activate the panic alarm. After 5 seconds, press again for 3 seconds to cancel.

### Unlocking mode alternatives



**Single-point entry:** Press once to disarm the alarm and unlock only the driver's door. Press twice to unlock all of the doors and the tailgate.

**Multi-point entry:** Press once to unlock all of the doors and the tailgate.

To change between entry modes, with the vehicle unlocked, press and hold the lock and unlock buttons simultaneously for 3 seconds. The hazard warning lamps flash to confirm the change.

### Passive entry/exit

The Smart key needs only to be on the driver's person while using a door handle. It does not need to be exposed or handled.

### Operating note

The Smart key may not be detected if placed in a metallic container, or behind a device with an LCD screen such as a smartphone, laptop (including when inside a laptop bag), etc. Loose coins in the same pocket as the Smart key can also act as a shield. Keep the Smart key clear of such devices when attempting Passive entry or Keyless starting.

### Emergency key release

If the Smart key fails to open the vehicle, the emergency keyblade can be used. Slide the side section up, then pull sideways to remove. Remove the keyblade and unfold it. Use the blade to gently lever off the appropriate door lock cover. The cover has a key symbol embossed into it.

Insert the key into the exposed lock, then turn and release it to unlock.



If the security system was previously armed with the Smart key, when the door is unlocked, the alarm sounds. To disarm the alarm, press the unlock button on the Smart key, or press the **START/STOP** button with the Smart key inside the vehicle.

### Smart key not found



If, after closing all of the doors, the Smart key is not detected by the vehicle, **Smart Key Not Recognised - Place As Shown And Press Start Button** is displayed in the Message center. With the brake pedal firmly pressed, press and release the **START/STOP** button. The Smart key can now be removed.



## POWERED TAILGATE *See page 2, item 25.*

### To open the tailgate


1. With transmission **P** selected, press to release the tailgate. The powered tailgate will continue to open to the set height. Alternatively, use the Smart key or press the internal release switch.

### To close the powered tailgate

2. Press and release to close the tailgate.

### Operating note

When the tailgate closes onto the locking latch, it will continue to 'soft close' to the fully closed position.

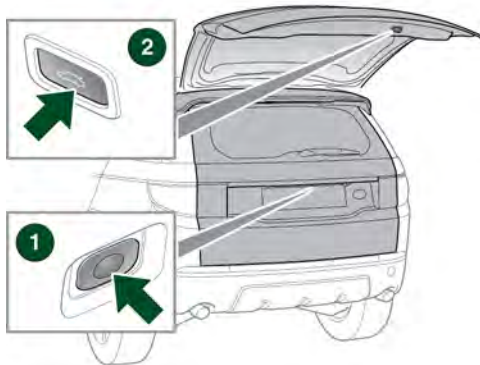

# COMFORT ADJUSTMENTS

## ELECTRIC SEAT ADJUSTMENT *See page 2, item 29.*


The driver's seat can be adjusted in up to 10 directions. The controls are located on the outer edge of the seat.

1. Lumbar support.
2. Seatback adjustment.
3. Height adjustment.
4. Forwards and backwards adjustment.
5. Cushion angle tilt.

### Memory seats

Positions for the driver's seat and exterior mirrors, can be stored in the vehicle's memory for future use. Up to 3 sets of seat and mirror positions can be saved at any one time.

1. When the required positions have been achieved, press the **M** button on the driver's door.
2. Within 5 seconds, press buttons **1**, **2** or **3** to store the current driving position to the chosen number. Any existing setting on that button is over-written.
3. A stored memory position can now be recalled with a press of the appropriate button; **1**, **2** or **3**. The seat and mirrors move to their preset positions.

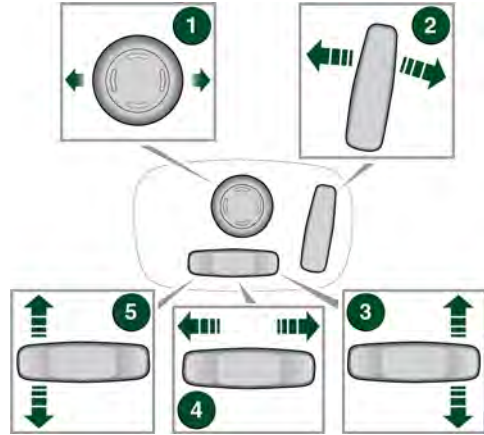

### Operating note

Memory seat buttons **1**, **2** or **3** must be pressed within 5 seconds of pressing the **M** button, otherwise the memory store function cancels.

## PASSENGER AIR BAG DEACTIVATION

The air bag status lamp is in the overhead console.

The front passenger seat is fitted with an occupancy sensor system that determines the state of seat occupancy and sets the status to suit:

- Seat unoccupied - air bag deactivated and status lamp off.
- Seat occupied - air bag activated and status lamp off.
- Seat occupied by a child restraint or low weight object - air bag deactivated and status lamp on.

The Message center will also display an amber warning icon.

For further information, refer to **Occupant detection** in the Owner's Handbook.





# COMFORT ADJUSTMENTS

## SEAT BELT REMINDER



A warning indicator in the Instrument panel illuminates if a front seat belt is not fastened or is unfastened, while the vehicle is moving.

While the ignition is on, the Message center displays a graphic reminder of seating positions and seat belt use.

- A tick in a circle indicates that a seat belt is fastened.
- A cross in a circle indicates that a seat belt is unfastened. After 30 seconds with the seat belt unfastened, this changes to an empty gray circle.
- An empty gray circle indicates that the associated seat belt is not fastened.



An audible warning will sound if a seat belt is unfastened while the vehicle is moving.

## CLIMATE CONTROL *See page 2, item 10.*



1. Front Climate seats settings.
2. Third row seats climate settings.
3. Touch to select the Timed Climate settings menu.
4. Climate control system off.
5. Windshield air distribution.
6. Air distribution:
  - Upper (face distribution).
  - Lower (body/feet distribution).
7. Rear A/C is locked.
8. Touch to synchronize front Climate zones.
9. Climate settings menu.
10. Front heated seats on/off or Climate seats settings menu.

11. Recirculation.

- Press briefly to activate for a set timed recirculation period.
- Press and hold to activate continuous recirculation. Screen fogging can occur.
- Press again to turn off.

12. Heated rear screen.

13. Heated windshield.

14. A/C. For cooled and dehumidified air.

15. Temperature controls. Rotate to adjust the temperature.

16. Maximum defrost. Fastest method to remove frost or heavy fogging from the windshield. Press again to switch off.

17. Press to display the **FRONT CLIMATE** screen.

18. Blower control. Rotate to adjust airflow through the vents. LEDs indicate the current speed selection.

19. **AUTO** mode. For fully automatic operation.

### Operating note

**AUTO** is the recommended Climate control operating mode. This will help to prevent fogging.

20. **MAX A/C**. Maximum Air Conditioning (A/C) program.

### External water deposits

The A/C system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.

## IGNITION ON AND ENGINE STARTING *See page 2, item 7.*

The **START/STOP** button is operational only when the Smart key is inside the vehicle.

### Ignition only on

1. Press once to switch the ignition on.
2. Press again to switch off.

### Engine start

1. The transmission must be in either **P** or **N** position.
2. Press the brake pedal.
3. Now press and release the **START/STOP** button.


















Press the button again to stop the engine and switch the ignition off.

### Smart key removal from the vehicle


If Intelligent stop/start is disabled, the engine continues to run, even if the Smart key is removed from the vehicle. However, if the engine is stopped, it cannot be restarted until the Smart key is returned to the vehicle.

## WARNING AND INFORMATION LAMPS

The following lamps may illuminate in the Instrument panel during normal driving to indicate that a related system or feature is operating. If any other warning lamp illuminates, refer to the Owner's Handbook. **DO NOT** ignore warning lamps.

	Notification of a critical warning in the Message center.		A seat belt is unbuckled.		Air bag system fault.
	USA. Low brake fluid or a system fault.		Notification of a non-critical warning in the Message center.		Adaptive Front lighting System (AFS) fault.
	Canada. Low brake fluid or a system fault.		Emissions fault.		Low fuel level.
	USA. Flashing: Electric Parking Brake (EPB) fault.		Emergency Brake Assist (EBA) fault or worn brake pads.		Adaptive Cruise Control (ACC) is in Follow mode.
	Canada. Flashing: Electric Parking Brake (EPB) fault.		On continuously: Dynamic Stability Control (DSC) fault.		One or more tires are under-inflated.
	Low oil pressure.		Anti-lock Braking System (ABS) fault.		

## INSTRUMENT PANEL MENU *See page 2, item 22.*

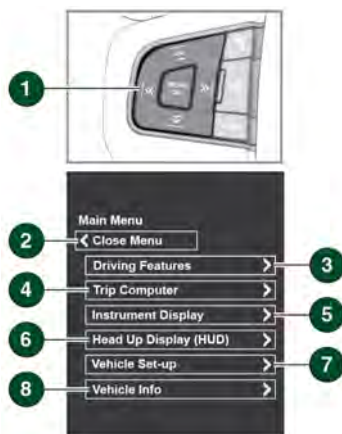

A number of vehicle features and display settings may be configured via the Instrument panel menu.

To display and navigate through the menu, press the **MENU OK** button on the steering wheel, then use the direction buttons to navigate through the menu. Press **MENU OK** to make selections.

1. Steering wheel menu control.
2. Close or return to the **Main Menu**.
3. Access the vehicle's **Driving Features** menu.
4. Access the **Trip Computer** menu.
5. Access the **Instrument Display** menu.
6. **Head-Up Display (HUD)** menu.
7. Access the **Vehicle Set-Up** menu.
8. Access the **Vehicle Info** menu. Available only before the engine is started.

# DRIVING

## TRANSMISSION

Gear selections can be made with either the rotary selector or with the selector paddles. The rotary selector elevates from the console at engine start up.


1. With the engine running and transmission **P** selected, press the brake pedal. Rotate the selector to **R** or **D**.
2. **Sport** mode: This is an automatic gear change mode, however, change points are modified to make full use of engine power. Press the selector down and rotate to **S**. The indicator alongside the selector illuminates.
3. **Commandshift** mode: This is an alternative to the automatic modes and is effective when rapid acceleration and engine braking are required. With **S** selected, use the left gear shift paddle (-) for downshifts and the right gear shift paddle (+) for upshifts.
4. With either paddle, pull it towards the steering wheel and release, to make a gear change.

The Message center displays the selected gear.

### Gear shift indicator



When manually selecting a gear, the indicator illuminates briefly in the Instrument panel at the recommended point for a gear shift (upshift).

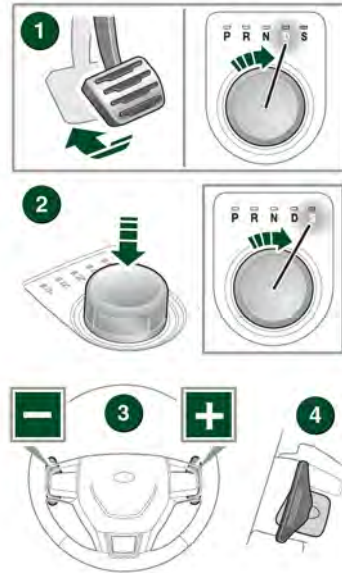

## INTELLIGENT STOP/START *See page 2, item 17.*

To activate an automatic engine stop:

Apply sufficient brake pressure to make sure the vehicle is stationary.



A green icon will illuminate in the Instrument panel.

The engine restarts when the brake pedal is released or a drive gear is selected.



To switch off, press the Intelligent stop/start switch. The LED icon extinguishes while Intelligent stop/start is deactivated.


### Operating note

When the vehicle comes to a stop, make sure that your feet do not touch the accelerator pedal. Inadvertent pressure will prevent the engine from stopping.

## ADAPTIVE CRUISE CONTROL (ACC) *See page 2, item 19.*

The ACC system is designed to maintain a gap to the vehicle ahead or a set road speed, if there is no slower vehicle ahead. A speed may be set between 20 mph (32 km/h) and 112 mph (180 km/h).

1. Press to switch between ACC and Automatic Speed Limiter (ASL).
2. Press to increase or set the speed.
3. Press to resume the previous set speed retained in the vehicle's memory. A set speed is cleared at ignition switch off.
4. Press to cancel but retain the set speed to the vehicle's memory.
5. Press to decrease the set speed.
6. Press to decrease the Follow mode gap.
7. Press to increase the Follow mode gap.

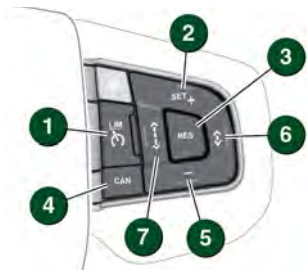

## ELECTRIC PARKING BRAKE (EPB) *See page 2, item 15.*

### Applying

With the vehicle stationary, pull the EPB switch up and then release it. A red lamp in the Instrument panel will illuminate continuously until the brake is released.

- The EPB will automatically apply when transmission **P** is selected.

### Releasing

With the ignition on, press the brake pedal, press down on the EPB switch and then release it. The red lamp in the Instrument panel extinguishes.

- With either transmission **D** or **R** selected, pressing the accelerator automatically releases the EPB.

To effect an automatic release, the driver's door must be closed or the driver's seat belt must be buckled.

## EXTERIOR LAMPS *See page 2, item 1.*



1. **Outer collar:** First position for side lamps, second position for headlamps and the third position for **AUTO**. With **AUTO** selected, all exterior lamps will switch on automatically when the ambient light fades.
2. **Inner collar:** Turn it away and release for front fog lamps. Turn it towards you and release for rear fog lamps. Turn and release again to switch off.

**Headlamps high beam:** Push the control forwards for high beam. To flash the headlamps, pull back and release.

**Auto high beam:** Active when set via **Vehicle Settings** in the **Instrument panel menu** with the lighting control in the **AUTO** position and low beams in use.

High beam then automatically activates when the sensor detects no light or very low light source ahead. Low beam is automatically selected, when appropriate.

## WIPERS AND WASHERS *See page 2, item 6.*

1. With Automatic rain sensing, the front wipers respond to rain severity. Without Automatic rain sensing, move up to select intermittent delay.
2. With Automatic rain sensing, rotate towards **MAX** to increase sensitivity. Without Automatic rain sensing, rotate towards **MAX** to increase the frequency of intermittent wiper.
3. Low speed continuous wipe.
4. High speed continuous wipe.
5. Windshield single wipe.
6. Windshield wash/wipe.
7. Rear wiper. Rotate to **INT** for intermittent wipe. Frequency increases with the vehicle's speed. Rotate to **ON** for continuous operation.
8. Rear wash/wipe. Continue to hold for additional operation.

If freezing conditions are likely, the wipers can be set to a higher position so that they can be lifted from the screen. See **Instrument panel menu**.



To prevent inadvertent wiper activation, turn the Automatic rain sensing off:

- Before entering an automatic car wash.
- During hot, dry and dusty periods.



## BLIND SPOT MONITORING (BSM)

While a forward gear is selected and the speed is above 6 mph (10 km/h), BSM will detect a vehicle approaching from behind, on either side, within its scanned range. Detection range is approximately 20ft (6 m) to the rear, and 8.2 ft (2.5 m) to the sides.

1. An amber icon, depicting an approaching vehicle, illuminates in the relevant door mirror.
2. An amber dot illuminates when the vehicle's speed is below 6 mph (10 km/h). BSM is active only when the amber dot is extinguished.




## PARK ASSIST

Park assist can help the driver to maneuver into, and out of, a space. With Park assist activated and while driving forwards at a vehicle speed of less than 18 mph (30 km/h), sensors identify a suitable space where the vehicle can be steered automatically into place. The driver only operates the accelerator and brake.

To search for a space on the driver's side, signal a turn in that direction.

When searching for a parking space, use the following procedure:

 Briefly press the Park assist button, located alongside the Touch screen, to activate the system.

*Note: Park assist will already have recorded any available space passed within the last few seconds and may issue immediate advice to stop.*

1. A first press switches the system on and selects **Parallel parking**.
2. Press again for **Perpendicular parking**.
3. Press a third time for **Parking exit**.

Follow the displayed instructions.

Park assist instructs you to stop or to drive forward to a starting point and when to select reverse gear. Further maneuvering may be required. Follow instructions in the Message center.

When the maneuver is completed, **STOP** will be displayed.



## TERRAIN RESPONSE *See page 2, item 13.*

When the vehicle is started, Terrain response normally starts in its **General** program.

Program selection is via the center console switches.



Use the switches to select a program. Icons illuminate, as selected. The Message center also displays an icon.

It is recommended that a special program be engaged whenever driving conditions are difficult, and then moved back to the **General** program, once those conditions are no longer present.

### Wading

When wading through water, select the program most suitable for the surface beneath the water. **DO NOT** exceed 2 ft (600 mm) of water depth and enter the water with a shallow approach angle.

**DO NOT** stop the vehicle or switch the engine off while wading. Severe electrical damage may occur.



**Dynamic:** Associated with driving style, rather than with a type of terrain. Dynamic selection allows the vehicle's full on-road potential to be explored. Handling and driving characteristics are enhanced for normal road surfaces.



**General:** Use for typical road surfaces.



**Grass-Gravel-Snow:** Suitable for surfaces which are firm but have a slippery surface, e.g., grass, snow, loose gravel, pebbles, or icy conditions.



**Mud-Ruts:** Suitable for soft, muddy, uneven, or rutted ground.



**Sand:** Suitable for soft, predominantly dry, yielding sandy ground, e.g., sand dunes and deserts. If the sand is damp or wet, the Mud-Ruts program may be more beneficial.

## PARKING AIDS

Front and rear Parking aids are activated when transmission **R** is selected. When a forward gear is subsequently selected, the Parking aids remain active until the vehicle's forward speed exceeds 10 mph (16 km/h).

If an obstruction is detected, an intermittent tone sounds. Moving closer to the obstructions increases the frequency of the tone.

The Parking aid switch is located next to the Touch screen. Press the switch to activate. The switch illuminates.





### Rear camera

Activates when transmission **R** is selected. The Touch screen displays guidance lines to aid reversing.

To view the user options, briefly touch the screen. Use the Back soft key to return to the previous screen.


1. Broken line - Full width of the vehicle.
2. Solid line - Projected reversing path based on the current steering wheel position.
3. Parking sensors activated - Shaded area indicates which rear sensors are active.
4. Tailgate access guideline - Do not reverse beyond this point if tailgate access is required.
5. User options. Touch one of the mini views to select overlay options.

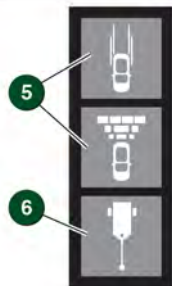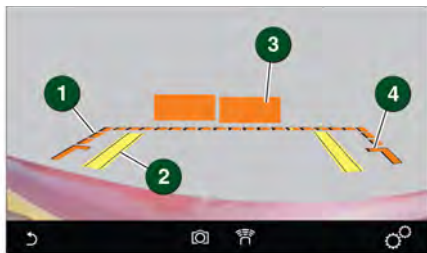

6. Hitch guidance. To aid the process of guiding the vehicle to the trailer tow hitch. A single hitch line is displayed as the reversing guideline. As the vehicle closes to within 2 ft (0.6 m) of the tow hitch, an automated zoom is operated.

# TOUCH SCREEN

## TOUCH SCREEN *See page 2, item 8.*

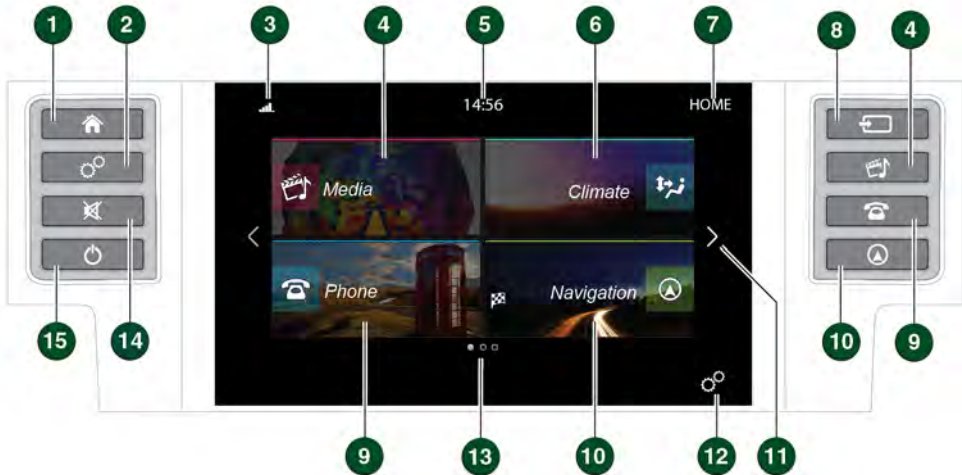


1. Press to display the **Home** menu.
2. Press to display the **Setup** menu.
3. Status icons: When a phone is connected, the battery level and network strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed.
4. Press or touch to display the Media menu.
5. Clock. Time can be adjusted via the **System** option, in the **GENERAL SETTINGS** menu.
6. Touch to display the **Front Climate** screen.
7. Screen title.
8. Press to select the media **SOURCE** list.
9. Touch the screen or press the button, to select the **PHONE** screen.
10. Touch the screen or press the button, to select the **NAVIGATION** system. The current destination route, or the **NAV MENU** screen will be displayed. For vehicles without navigation, press to display the **MEDIA SETTINGS** menu.
11. Touch the arrow or swipe the screen, to display the **EXTRA FEATURES** screen.
12. Touch to select the **GENERAL SETTINGS** menu.
13. Indicator for the number of available screens.
14. Press to mute the sound.
15. Press to switch the Touch screen on/off. If Surround cameras are fitted, the screen can be switched off in Extra features.

The Touch screen requires only light touches. Excess pressure could result in damage.

## AM/FM RADIO

On the Touch screen **HOME** menu, touch the **Media** option. Select **Source**, followed by **FM Radio**.

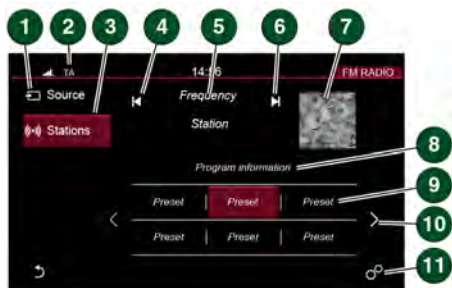

1. **Source:** Touch to select the media source list.
2. **Status icons:** Shows the connected phone's battery level, network signal strength, and **TA** (if selected).
3. Touch to view and select stations.


4. Briefly touch for auto-seek down to the previous station.
5. The selected radio station name and frequency.
6. Briefly touch for auto-seek up to the next station.
7. Waveband image (if available).
8. Information from the selected station.
9. Preset soft keys: Can store 6 stations for each waveband. Touch and hold a soft key to store the current radio station.
10. Touch the arrow to scroll through the preset stations.
11. Touch to select the **SETTINGS** pop-up menu. Select **Media**, followed by **Radio**, to view the **RADIO SETTINGS**.

**Note:** Manual radio station seek up and down can be achieved with the steering wheel audio controls.

## SAT RADIO

Satellite radio is a subscription service. Channel 184 is available as a preview channel for a limited time. During this period, the satellite radio provider (SIRIUS) telephone number and the SIRIUS ID number is displayed. To activate and use the satellite radio, call SIRIUS while you are inside the vehicle.

1. **Source:** Touch to select the media source list.

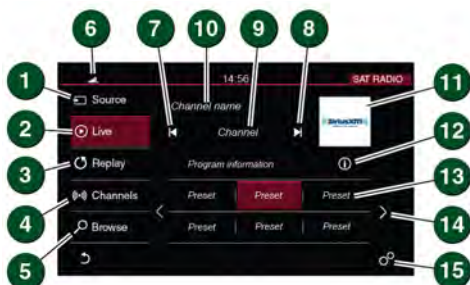


2. **Live:** Touch to select the Live radio option and exit Replay mode.
3. **Replay:** Touch to select the Replay option and exit Live mode.
4. **Channels:** Touch to display a list of all channels.
5. **Browse:** Touch to browse through channels by genre, or select channels by entering a channel number.

6. **Status icons:** Showing the connected phone's network, phone battery level and network signal strength.
7. **Seek down:** Touch to seek down in frequency to the next radio channel.
8. **Seek up:** Touch to seek up in frequency to the next radio channel.
9. Selected radio channel number.
10. Channel name.
11. Channel image.
12. **Channel information:** Touch to view a pop-up of information broadcast by the channel. Also a song or artist can be added as a favorite.
13. **Station presets:**
  - Touch and release to tune to the radio channel stored on that preset.
  - Long-touch to store the current radio channel on that preset.
  - Use the seek buttons on the steering wheel to change to the next, or previous preset radio channel.
14. Touch the arrow to scroll through the list of preset channels (a maximum of 18 channels can be set).
15. Touch to select the **SETTINGS** pop-up menu.

## PORTABLE MEDIA

On the Touch screen **HOME** menu, touch the **Media** option. Select a portable media in the **Source** options.

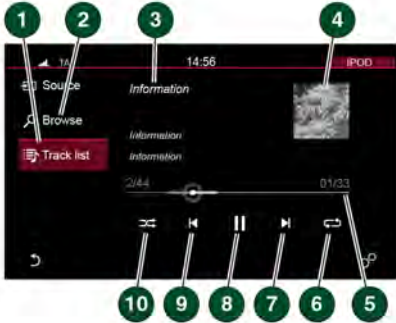

1. **Track list:** Touch to select the list of tracks from the connected device.
2. **Browse:** Touch to select the menu screen for the required music or audio source subject list for the connected device: **Playlists, Artists, Albums, Songs**, etc.
3. Information relating to the music or audio being played.
4. If available, the album art for the current track being played is displayed.
5. Progress bar: Drag the spot or touch the line to move forwards or backwards through the track.
6. Continuous play: Touch to play the current track continuously.
7. Skip/scan forwards: Touch to skip forwards to the start of the next track, or, touch and hold to scan forwards through the current track being played. Playback resumes when the soft key is released.
8. Pause/play: Touch to pause playback; touch again to resume playback.
9. Skip/scan backwards: Touch to skip back to the beginning of the current track being played, or, touch and hold to scan backwards through the current track being played. Playback resumes when the soft key is released.
10. Shuffle: Touch to play random tracks from the current MP3 folder, USB folder or iPod playlist.

**Note:** When connecting a **Bluetooth®** wireless technology device, use the **Touch screen** to operate and search the device. Repeat and Shuffle modes are not available for **Bluetooth** wireless technology devices.

### Connecting a portable media device

Portable media devices can be connected to the media hub located in the cubby box.



1. SD card slot for Navigation and Voice only. Insert until it clicks into place.

**Note:** Only use the SD card provided with the vehicle. The media system will not play music or display saved images from an SD card.

2. USB socket.
3. 3.5 mm AUX socket.

**Note:** Auxiliary devices have no Touch screen control.

**Note:** If an iPod is connected to the vehicle via its **Bluetooth** wireless technology facility and also, via a USB cable, for music playback, make sure that the USB connection is made last.

If alternative connections are made, track title and time information is shown on the Touch screen but no audio will be heard through the vehicle speakers. To address this issue, disconnect and reconnect the USB cable.

## STEERING WHEEL AUDIO CONTROL See page 2, item 22.

Media system selections can also be made from the steering wheel control.




1. Press repeatedly for media source options.
2. Volume decrease.
3. Seek/scan/skip down.
4. Volume increase.
5. Seek/scan/skip up.



## TOUCH SCREEN NAVIGATION

To access navigation, press either the Navigation button to the right of the Touch screen, or touch **Navigation** on the **HOME** screen.

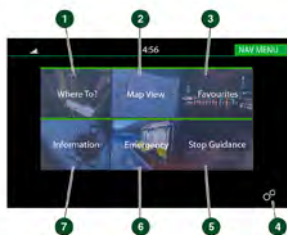

1. **Where To?:** Touch for setting a destination. When a destination is selected, there are 4 further options:
  - **Yes** to start navigation.
  - **Options** for the type of route.
  - **Avoid** to avoid a road feature.
  - **Save** to save the route to your **Favorites**.
2. **Map View:** Touch to view the map screen.
3. **Favorites:** Touch to view the list of stored destinations.
4. Touch to select the **SETTINGS** pop-up menu, select **Navigation**, to view the settings.
5. **Stop Guidance:** Touch to cancel the current route guidance.
6. **Emergency:** Touch to see a list of emergency services.
7. **Information:** Touch to display the following: **Traffic**, **Where am I**, and **Trip computer**.


### Settings

When using the Navigation system for the first time, personal preferences should be set. These settings are then applied whenever the Navigation system is used.

Settings include:

- Speed limit warning.
- Navigation guidance options.
- Map display mode.
- Map view.
- Orientation of map direction.
- Traffic incidents.

### Map view

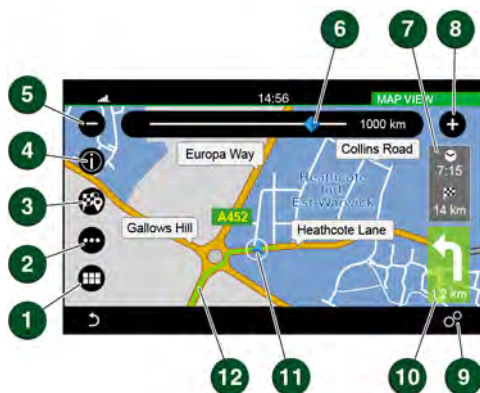

1. Touch to select the **NAV MENU**.
2. Touch to select the **ROUTE** menu.
3. Touch to set a selected destination.
4. Touch to show information for a Point Of Interest (POI), or for traffic information.
5. Touch to reduce the map size.
6. Drag the indicator along the scale to enlarge or reduce the map size, or touch the line for the position required.
7. Touch to change between estimated time to destination and distance to destination.
8. Touch to enlarge the map size.
9. Touch to select the **SETTINGS** pop-up menu, select **Navigation**, to view the settings.
10. Next maneuver icon and the distance to the next maneuver. Touch to hear Voice guidance for the next maneuver.
11. Indicates the vehicle's position on the set route.
12. The route that has been set.

## BLUETOOTH® WIRELESS TECHNOLOGY DEVICES

### Bluetooth Connectivity

For the latest compatibility information, go online to [www.landroverusa.com](http://www.landroverusa.com). Select **OWNERSHIP** and then **Bluetooth**.

**Note:** *The process of pairing and connecting a phone to the vehicle varies depending on the type of phone used.*

Use the following procedure in conjunction with your phone manufacturer's instructions.

Connection must be made with the ignition switched on or with the engine running.

### Pairing and connecting using a phone

1. Switch the ignition on and make sure that the Touch screen is active.
2. Select **GENERAL SETTINGS**, then **Bluetooth**.
3. From the list, select **Make system discoverable**.
4. Switch on your phone or device's connection. Make sure that your phone or device is in discoverable mode, sometimes referred to as find me mode (see your phone or device's operating instructions for more information).
5. A Passkey number appears on the phone or device. If this number matches the number on the Touch screen, touch **Yes**, or press **Pair** on the phone or device.
6. Once a phone or device is paired, it appears on the connected device's list and on the **PHONE** screen.

### Pairing and connecting using the Touch screen

1. Switch on your phone or device's connection. Make sure that your phone or device is in discoverable mode, sometimes referred to as find me mode (see your phone or device's operating instructions for more information).
2. Switch the ignition on and make sure that the Touch screen is active.
3. Select **GENERAL SETTINGS**, then **Bluetooth**.
4. Select **Search for Bluetooth Devices**.
5. The system searches for a phone or device and, if found, the phone or device displays on the screen. If the phone or device is not found, **NO DEVICES FOUND** is displayed.
6. A Passkey number appears on the phone or device. If this number matches the number on the Touch screen, touch **Yes**.

### Calls via the Touch screen

With a paired and active phone, press the Phone button to the right of the Touch screen.



1. Select **Messages**, **Contacts** or **Call lists**.
2. Touch to search for a new device, or change to another, paired phone or device.
3. Touch to display the keypad. Use the keypad to enter a phone number.
4. To make a call, touch the green connect icon. The icon changes to a red connected call icon. To end a call, touch the red icon.

### Calls via the steering wheel controls

See page 2, item 22.




1. Press to answer a call or to make a call. Press again to end a call. Press and hold to access the contacts list.
2. Press to increase the call volume.
3. Press to decrease the call volume.
4. Voice control talk button. The screen displays the available options. Wait for the voice symbol to appear and a tone to sound before saying a command.

## REFUELING

The fuel filler flap is located on the right side of the vehicle.

Push the flap at the rear edge to release, then pull to open.

The correct fuel specification is shown on the inside of the fuel filler flap.

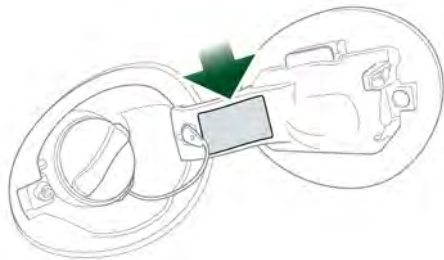

Twist the cap counter-clockwise to release. Replace the cap and turn it clockwise until the ratchet clicks. Close the fuel filler flap until it is latched in the closed position.

### Fuel information

**DO NOT** use E85 fuels (85% ethanol content). Equipment necessary for the use of fuels containing more than 15% ethanol is not fitted to this vehicle. If E85 fuels are used, serious engine and fuel system damage will occur.

Avoid using fuel containing methanol. Fuels containing methanol may cause serious engine and fuel system damage.

Unleaded fuels containing up to 15% MTBE can be used.

### Incorrect fueling

No responsibility is accepted for damage caused by using incorrect fuels.


If the vehicle is filled with the wrong type of fuel:

- **DO NOT start the engine!**
- **Call for qualified assistance!**

## TIRE PRESSURE LABEL

Tire pressures are displayed on a label attached to the pillar behind the driver's door.

## HOOD RELEASE

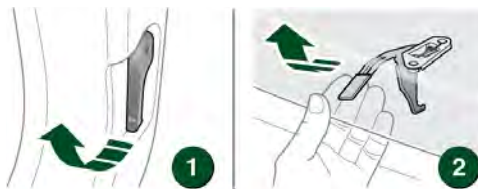

1. Pull the hood release lever, located in the left side front footwell.
2. Lift the hood safety catch, located below the center point of the hood, then raise the hood.